



Technical Data

OPTIONAL TowelMate® ACCESSORY FOR 4" DEEP PAPER TOWEL DISPENSERS

3944-130

For Retrofit into:


ConturaSeries® □ B-43944 □ B-43949 manufactured prior to May 2010


ClassicSeries® □ B-38032 □ B-3942 □ B-3944 □ B-3947 □ B-3949

TrimLineSeries® □ B-39034 □ B-390349

ConturaSeries® □ B-4362 Discontinued Model

□ Other Manufacturers' similar models to Bobrick's B-3944 ClassicSeries Family

 TowelMate reduces paper towel waste by 20% – 40% and complies with the US EPA Reduce & Reuse Resource Conservation Initiative.

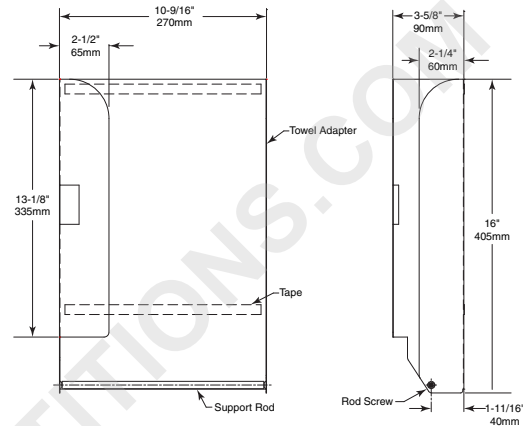

MATERIALS:

TowelMate Module – 18-8, Type 304, 24-gauge (0.6mm) stainless steel with 2B finish.

TowelMate Support Rod – Black, 3/8" (10mm) diameter Nylon 6/6 Rod fastened to Module with two stainless steel sheet metal screws.

OPERATION:

Optional TowelMate Accessory fits into Bobrick Model number(s) B-3942, B-3944, B-3947, or B-3949 ClassicSeries Paper Towel Dispensers; B-4362, B-43944, B-43949 ConturaSeries standard in units before May 2010; and B-38032, B-39034, B-390349 TrimLineSeries. TowelMate Accessory Module has towel guide angle with 90 degree return to prevent paper towels from falling forward out when door is opened for servicing. TowelMate Accessory Support Rod allows dispenser to dispense paper towels one at a time without tabbing, tearing, bulging, sagging and bunching. To load paper towels in towel tray, place stacks of folded paper towels inside module with bottom paper towel leaf facing forward. Feed first sheet from bottom of the towel tray opening over the rod and through the opening to conceal rod and start dispense.

INSTALLATION:

Open door of towel cabinet and remove all existing paper towels from dispenser. Remove existing plastic towel adapter secured inside dispenser cabinet to clear unit of any obstructions. Remove protective film from double back tape on the back of TowelMate Accessory and place Module inside towel dispenser. Position TowelMate Support Rod evenly over the towel tray opening with bottom of module resting down on inside of towel tray and firmly press TowelMate Module into dispenser cabinet back. Load stacks of paper towels into cabinet, start dispense, close cabinet door.

For units manufactured prior to July 2006 with stainless steel Towel Guide brackets, insert TowelMate positioned between brackets.

SPECIFICATION:

TowelMate Accessory module shall be Type-304 stainless steel with 2B finish. Black nylon support rod, 3/8" (10mm) diameter, fastened to module with stainless steel sheet metal screws. TowelMate Accessory fits into Bobrick Model number(s) B-3942, B-3944, B-3947, B-3949 ClassicSeries Paper Towel Dispensers, B-38032, B-39034, B-390349 TrimLineSeries and other manufacturers' similar models; and B-4362, B-43944, B-43949 ConturaSeries standard in units prior to May 2010. Paper Towel Dispenser fitted with TowelMate Accessory shall dispense 800 multifold paper towels. TowelMate Accessory Module has a 90 degree return towel guide angle to prevent paper towels from falling forward out when door is opened for servicing, and a TowelMate Nylon Support Rod fitted across the center of the towel tray opening to dispense paper towels one at a time without tabbing, tearing, bulging, sagging or bunching (falling through the opening). TowelMate reduces paper towel waste by 20% – 40% and complies with US EPA Reduce & Reuse Resource Conservation Initiative.

Optional TowelMate® Accessory for 4" Deep Paper Towel Dispensers shall be Model 3944-130 of Bobrick Washroom Equipment, Inc., Clifton Park, New York; Jackson, Tennessee; Los Angeles, California; Bobrick Washroom Equipment Company, Scarborough, Ontario; Bobrick Washroom Equipment Pty. Ltd., Australia; and Bobrick Washroom Equipment Limited, United Kingdom.